



Notes

AR = Arm Repeater

LR = Lamp Repeater

HNC = Home Normal Control

NC = Normal Control

Layers Showing:

1943

1950

1965

1976 ✓

DIAGRAM HOLYWELL JCN **TALACRE** LRs FIRE EXTINGUSHER SEALED RELEASE POINTS 18/19 T1 T11208 T9589 T1 / T9590 + FIRST AID BOX 6R 7 21 T. 4 37 T9590 39 40 23 24 25 26 27 28 29 15 16 17 18 19 20 21 22 6 7 8 9 10 11 12 13 14 30 31 32 SPARE SPARE SPARE SPARE SPARE SPARE

Lever and block shelf arrangement based on notes of A.
Roberts as recorded 26.5.1986
Pull chart information from MJA/RDF notes
recorded 5/8/76 (unaltered at JED visit Jan 1981)